

TROUBLESHOOTING:

	Possible Cause	Corrective Action
Bulb will not light	1. Bulb is burned out	1. Replace light bulb
	2. Switch is off	2. Make sure switch is on
	3. Faulty wire connection	3. Check wiring
Fuse blows or circuit breaker trips when light is turned on	Crossed wires or power wire is grounding out	Check wire connections

PRODUCT MAINTENANCE:

1. To clean the outside of the lamp, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the shade and surface of the lamp.
2. To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the inside shade and interior surface of the fixture.
3. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

 
LIMITED WARRANTY

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. **The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor expense costs involved in the replacement or repair of said product.**



INSTRUCTION MANUAL INTERIOR 3-LIGHT PENDANT HALINA

HOME DEPOT SKU 599-504 | S/O: 427-219 (UPC 773546217415)
CHROME FINISH

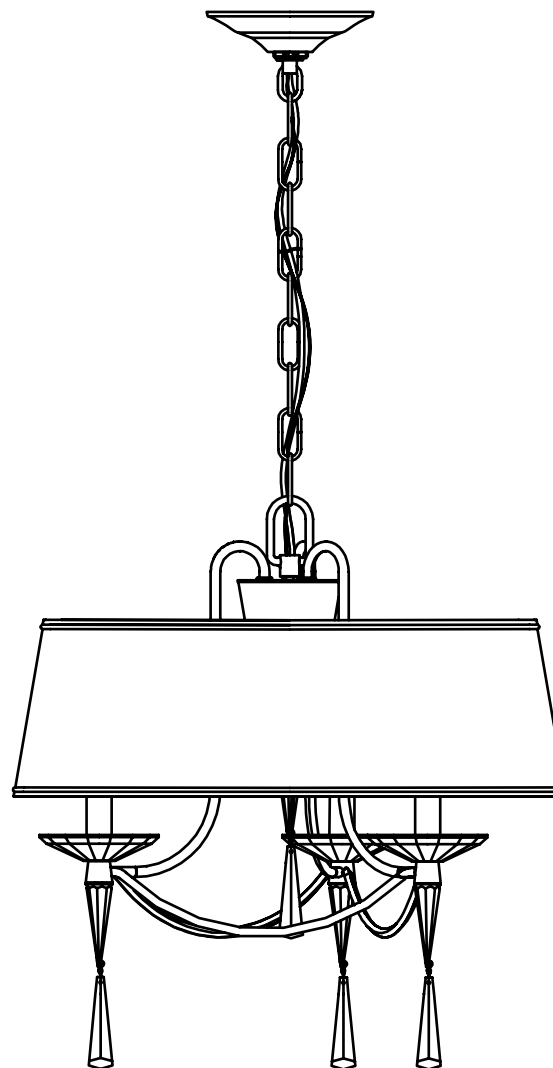

Thank you for purchasing this Hampton Bay interior decorative lighting. This product has been manufactured with the highest standards of safety and quality.

FEATURES:

Adding shimmer and sparkle to your decor, the jewel-like crystal accents of this fixture will be reflected in the light coming from within. Flowing arms uphold the candlestick style bulb holder and fabric lampshades.

 
QUESTIONS, PROBLEMS, MISSING PARTS:

Before returning to your local Home Depot, please call our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your **SKU 599-504 or (UPC 773546217415)**.


CAUTION:

1. Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.
2. CONSULT A QUALIFIED ELECTRICIAN IF YOU HAVE ANY ELECTRICAL QUESTIONS.
3. If you have any non-electrical question about this fixture, please contact our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your **SKU 599-504 or (UPC 773546217415)**.
4. Keep your receipt and these Instructions for Proof of Purchase.

INSTALLATION

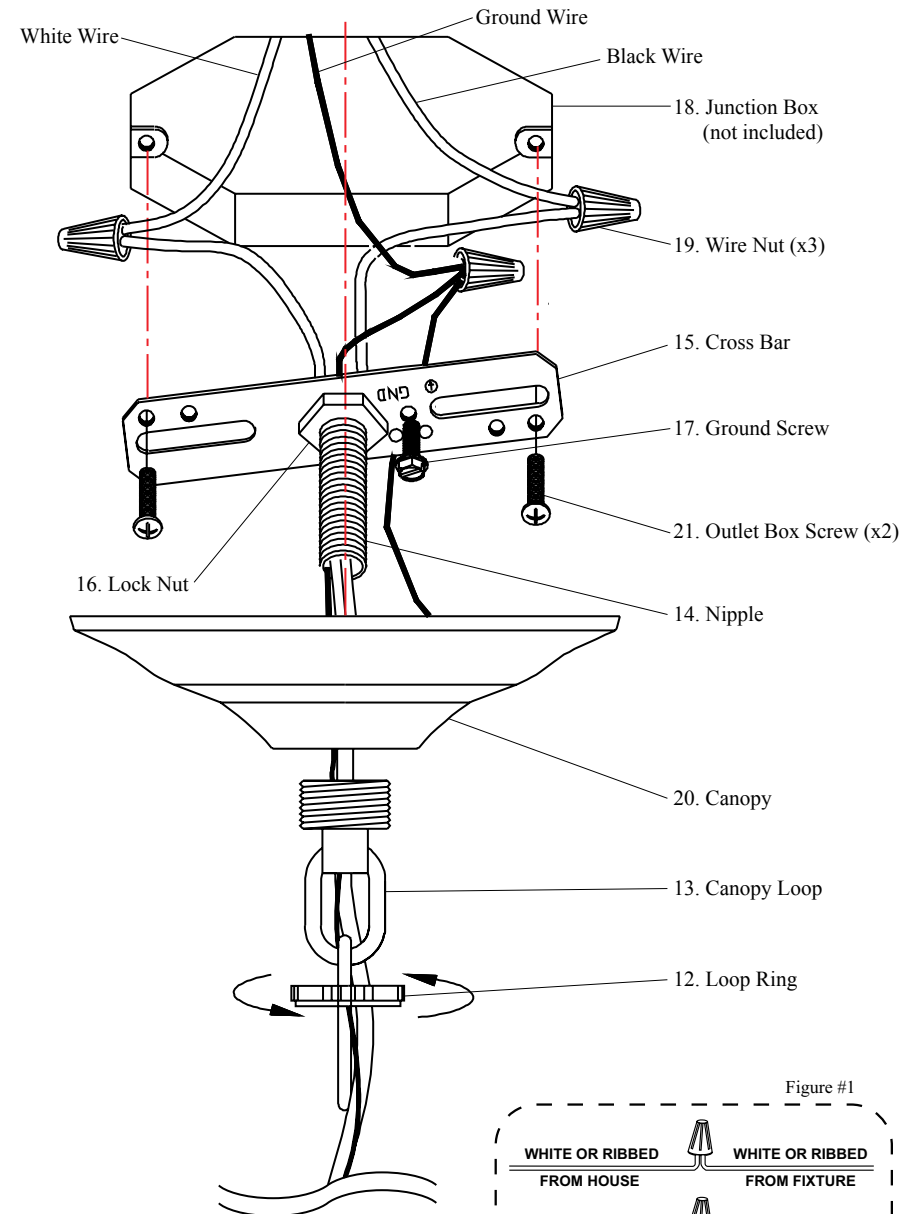

 ADDITIONAL PARTS FOR INSTALLATION (included):

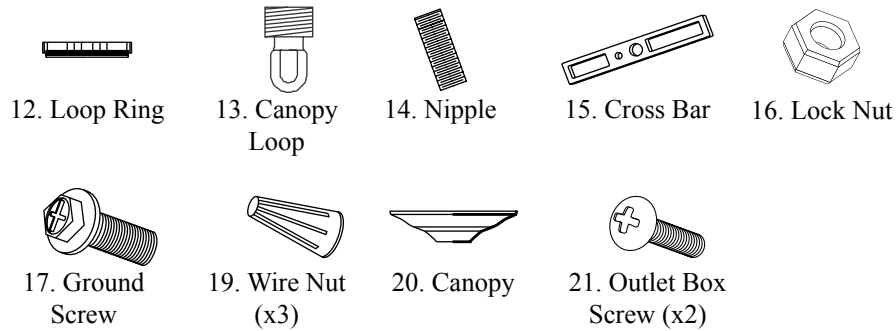


INSTALLATION INSTRUCTIONS:

1. Turn off power at main fuse box.
2. Install cross bar (15) assembly complete with nipple (14) and canopy loop (13) to junction box (18) with outlet box screws (21) as one complete assembly.
3. Remove loop ring (12) from canopy loop (13). Slip canopy (20) over loop (13) and secure by fastening loop ring (12). Adjust the height of the nipple (14) so canopy will sit flat against ceiling and tighten locknut (16) against crossbar (15).
4. Remove loop ring (12) and canopy (20) from ceiling.
5. Hold chandelier up against canopy loop (13) with chain and adjust to desired height. Remove excess chain.
6. Before tightening chain onto canopy loop (13), weave chandelier wire through every second link.
7. Let the canopy loop ring (12) slip to the bottom of chain. Repeat this step for canopy (20).
8. Secure chain onto canopy loop (13).
9. Weave wire through the canopy loop and into junction box.
10. Install both ground wires of chandelier (one from the canopy and one from the fixture) to ground screw or ground wire of junction box or ground screw (17) on crossbar. (Ref. Fig.1)
11. Connect black wire of power supply to the smooth side of the wire (flexible cord) from the chandelier and connect white wire of power supply to the ribbed side of the wire from the chandelier. (Ref. Fig.1)


NOTE: Always use wire nuts (19) or marrettes (included) to connect wires and push all excess wire and connections back into junction box.

12. Lift canopy up to ceiling covering junction box and secure by using canopy loop ring.

 TOOLS REQUIRED FOR ASSEMBLY & INSTALLATION (not included):

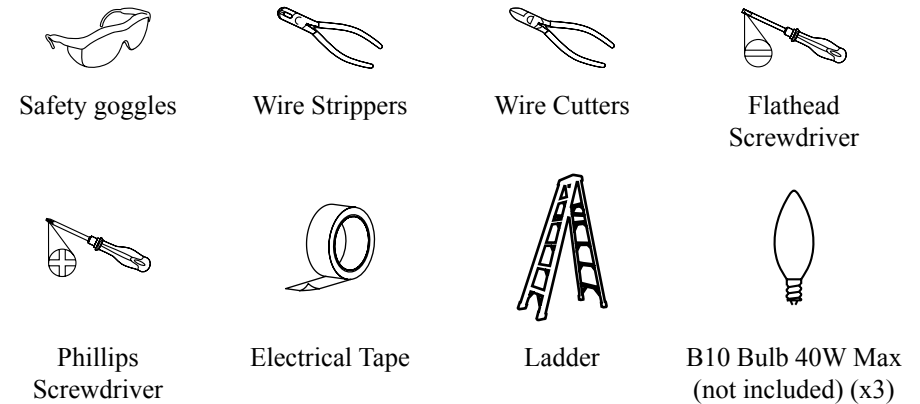

 ADDITIONAL PARTS FOR ASSEMBLY (included):

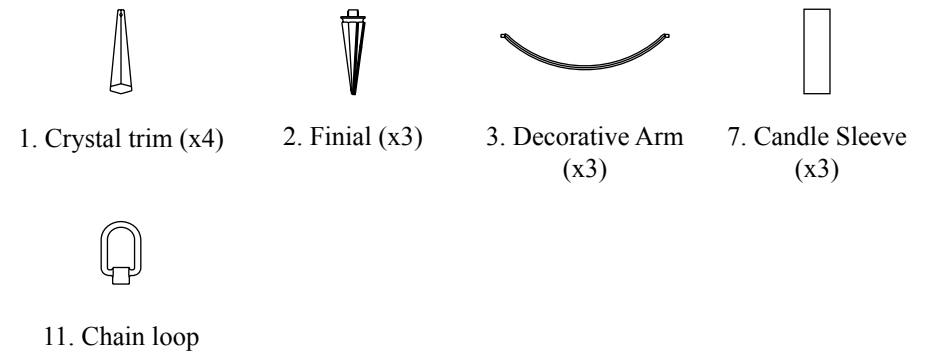

ASSEMBLY INSTRUCTIONS:

1. Carefully unpack the fixture; lay out all parts on clean surface.
2. Tighten chain loop (11) onto fixture main body.

GLASS AND BULB INSTALLATION:

1. Install metal candle sleeves (7) over socket.
2. Install bottom socket finials (2) and finish by hanging decorative crystal trim (1) onto each finial (2).
3. Install 40W max B10 chandelier bulbs (not included) (8).

ASSEMBLY:

